Quick Installation Guide

SkyIPCam500 Night Vision Network Camera

Model # AICN500

Ver. 1A

Downloaded from www.Manualslib.com manuals search engine

Package Contents:

- Night Vision Network Camera
- Camera Stand
- Power Adapter
- Ethernet Cable (Cat.5)
- Utility CD
- Quick Installation Guide

Section 1

This Quick Installation Guide only provides basic instructions. For detailed information on using this product, please refer to the User's Manual on the supplied CD.

Getting Started

Step 1 Connect one end of the Ethernet cable to the IP Camera and connect the other end to one of the LAN ports on your router or switch.

Step 2 Power on the IP Camera by connecting one end of supplied power adapter to the power jack of the Camera and connecting the other end to the electrical outlet.

Step 3 Verify that the yellow light (Power) is solid and the green light (Link) is blinking.

Downloaded from www.Manualslib.com manuals search engine

Section 2

Installing the SkyIPCam Utility

Step 1 Insert the provided CD and wait for the auto-run screen to appear.

Step 2 Click on **Install SkyIPCam Utility**.

Note: *If the auto-run screen does not appear automatically, go to* ***Start***, ***Run***, *type:*
D:\ Utility\Setup.exe *(where* ***D*** *is the letter of your CD drive) and click* ***OK***.

Downloaded from www.Manualslib.com manuals search engine

Step 3 Keep clicking **Next** on the following screens.

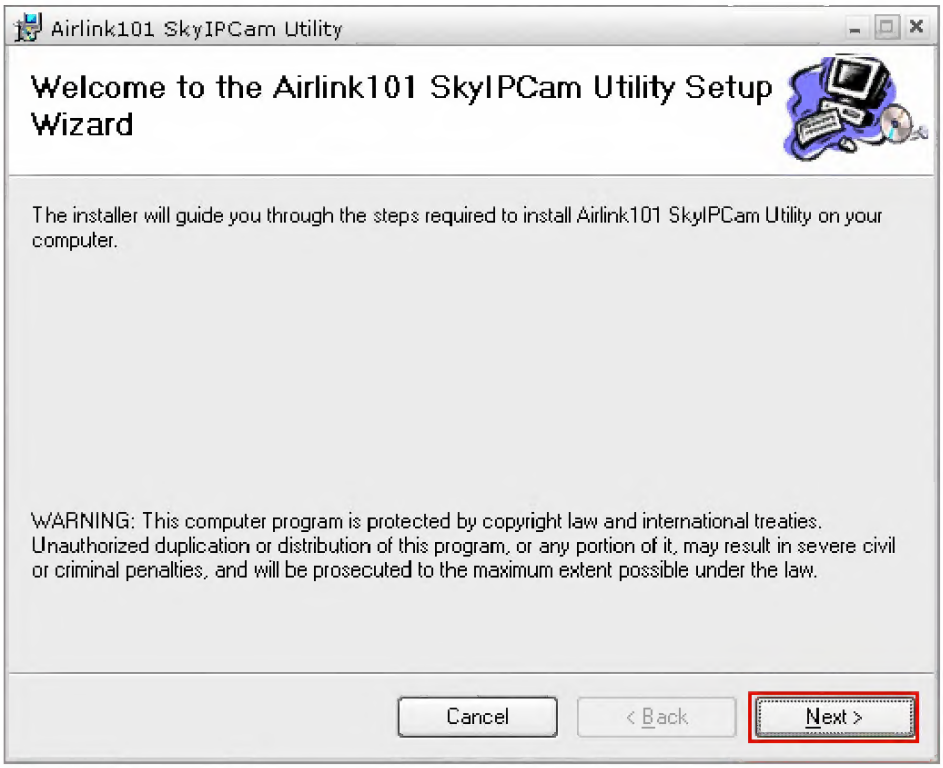
Airlink101 SkyIPCam Utility
Welcome to the Airlink101 SkyIPCam Utility Setup Wizard
The installer will guide you through the steps required to install Airlink101 SkyIPCam Utility on your computer.
WARNING: This computer program is protected by copyright law and international treaties. Unauthorized duplication or distribution of this program, or any portion of it, may result in severe civil or criminal penalties, and will be prosecuted to the maximum extent possible under the law.
Cancel
< Back
Next >

Step 4 Click **Close** to complete the installation.

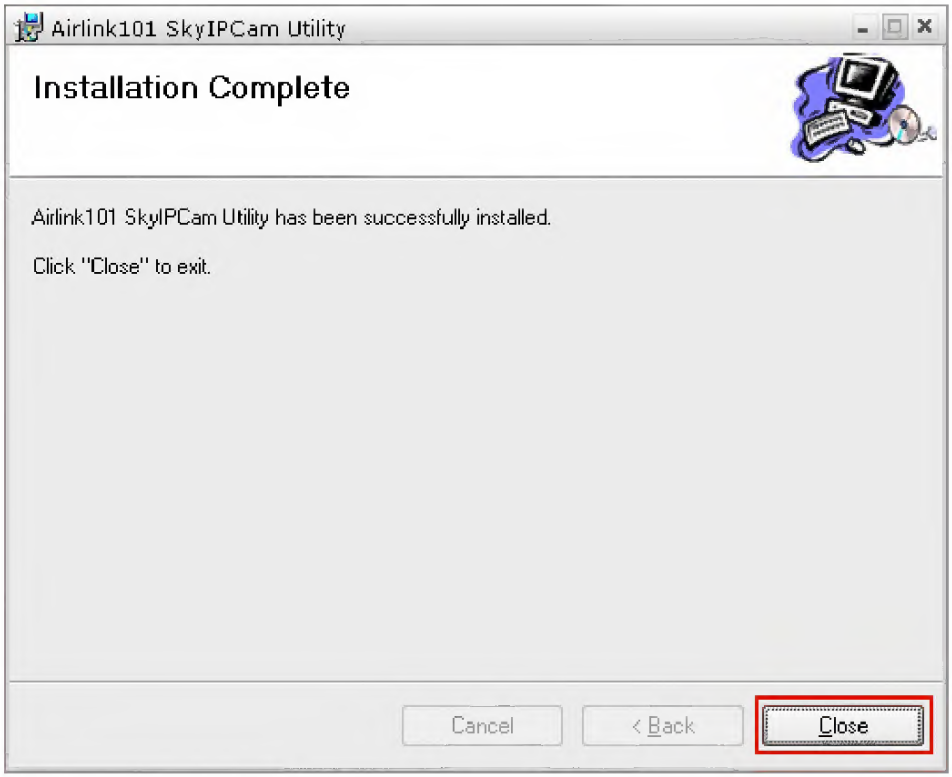

Downloaded from www.Manualslib.com manuals search engine

Section 3

Using the SkyIPCam Utility

Step 1 Go to **Start > (All) Programs > AirLink101 > AirLink101 SkyIPCam Utiliy**

Step 2 Select the IP Camera you want to configure from the list and click on the **Change IP** button.

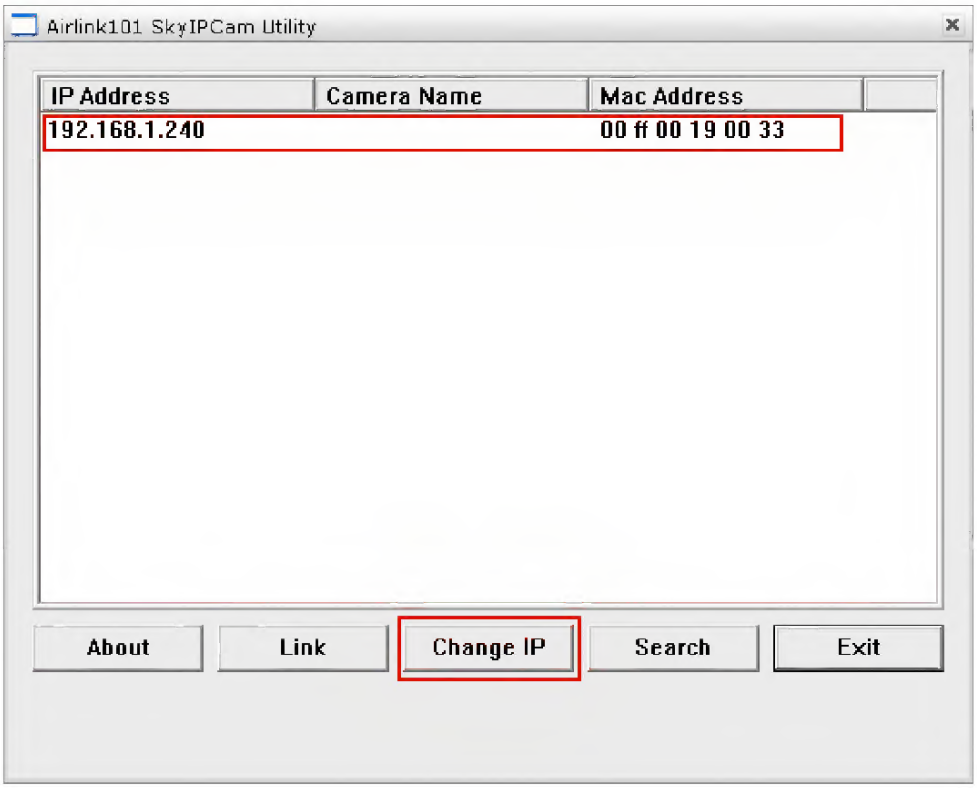

Note: If the Camera's IP address does not show up in the window, make sure the camera is properly connected to the same network as your computer is, and then click on the **Search** button.

Downloaded from www.Manualslib.com manuals search engine

Step 3 You may simply accept the suggested **Static IP**, or you can manually change the last 3-digit number of the IP Address, in case that the suggested one has already been used by another device in the same network. Another option is that if your router's DHCP server is enabled, you can select **DCHP**, so the router will automatically assign a dynamic IP address to your camera.

Enter **"admin"** for both **ID** and **password**, and click **Change**.

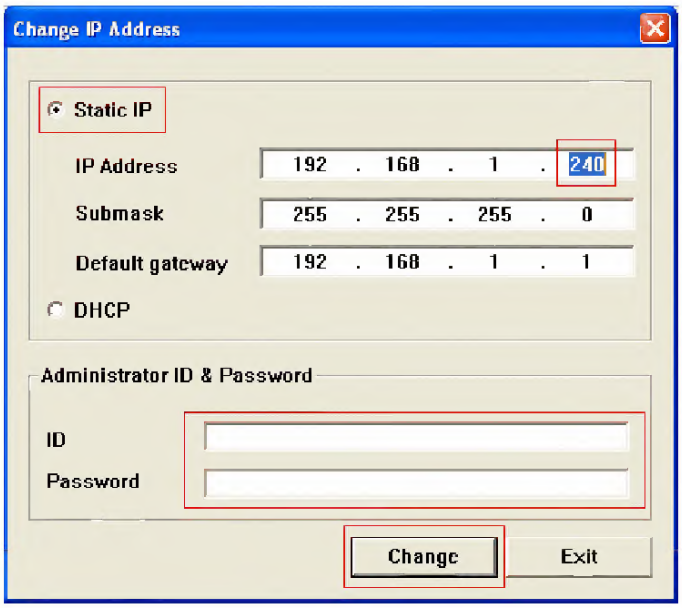

Step 4 Once the utility has saved changes, it will return to the original screen. Select your camera from the list and click **Link**.

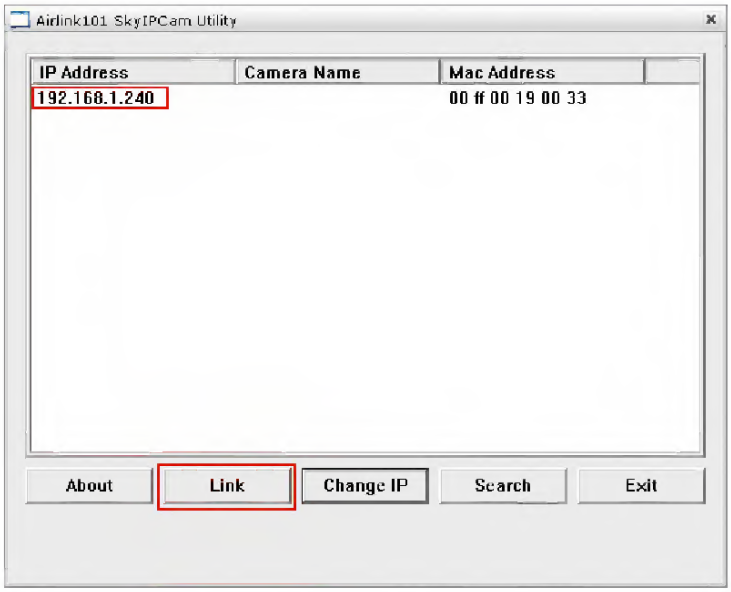

Downloaded from www.Manualslib.com manuals search engine

Step 5 When you are prompted for the username and password, enter "**admin**" for both **User name** and **Password**, and click **OK**.

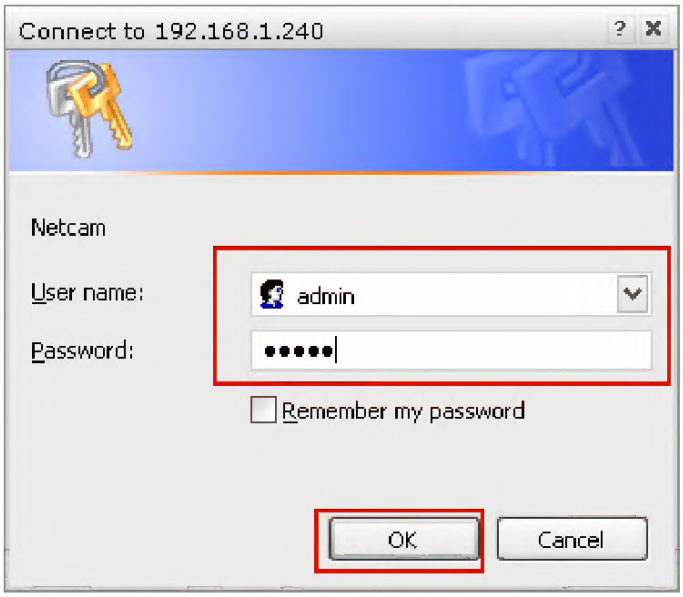

Step 6 The camera viewing window will appear. Click on **Setup**, and then click on **Smart Wizard**.

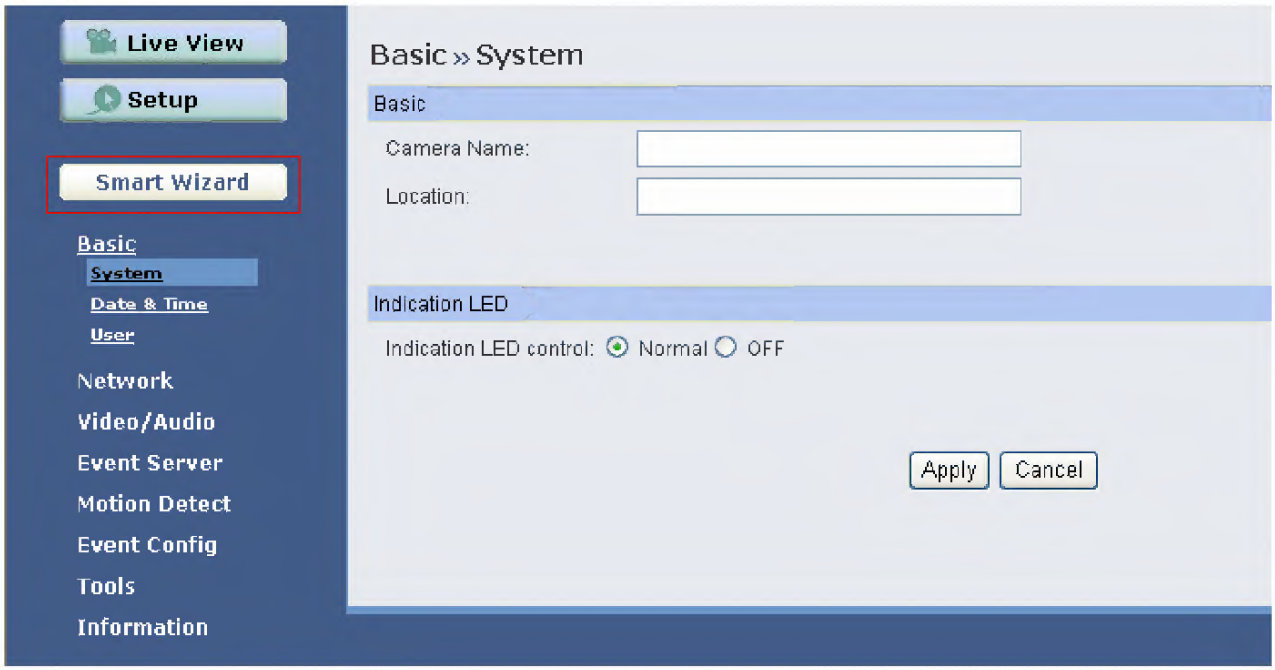

Downloaded from www.Manualslib.com manuals search engine

Step 7 Enter a name for your camera and a location if you like. Then enter "**admin**" for both **Admin Password** and **Confirm Password**. Click **Next**.

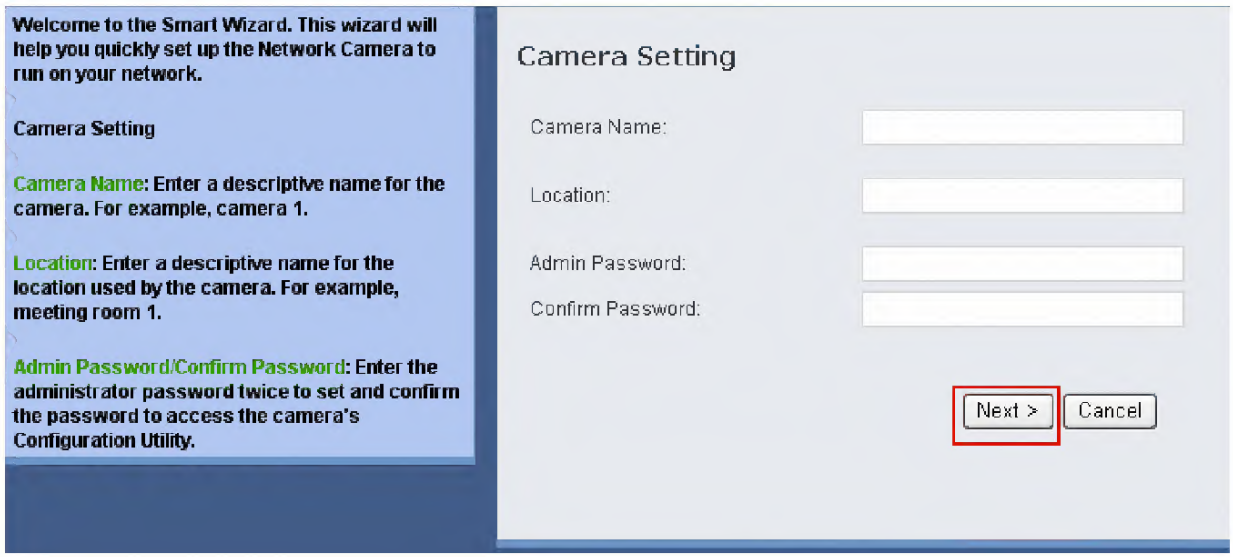
Welcome to the Smart Wizard. This wizard will help you quickly set up the Network Camera to run on your network.
Camera Setting
Camera Name: Enter a descriptive name for the camera. For example, camera 1.
Location: Enter a descriptive name for the location used by the camera. For example, meeting room 1.
Admin Password/Confirm Password: Enter the administrator password twice to set and confirm the password to access the camera's Configuration Utility.
Camera Setting
Camera Name:
Location:
Admin Password:
Confirm Password:
Next >
Cancel

Step 8 You can change the camera's IP settings in the below window. If you have done this in Step 3, click **Next** and go to the next step.

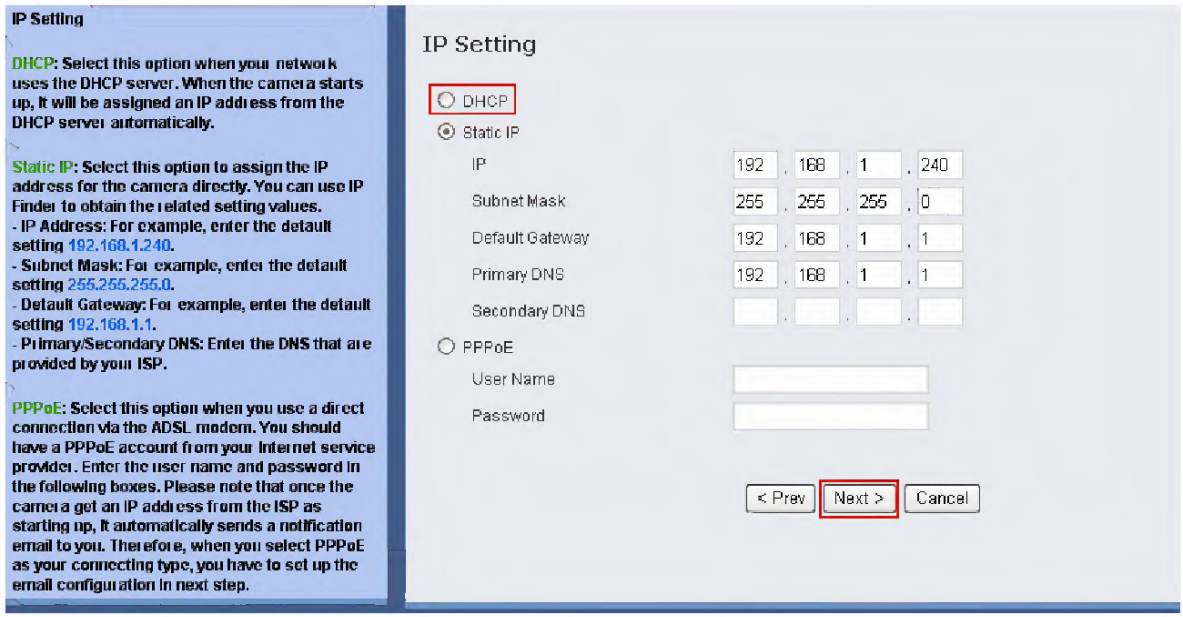
IP Setting
DHCP: Select this option when your network uses the DHCP server. When the camera starts up, it will be assigned an IP address from the DHCP server automatically.
Static IP: Select this option to assign the IP address for the camera directly. You can use IP Finder to obtain the related setting values.
- IP Address: For example, enter the default setting 192.168.1.240.
- Subnet Mask: For example, enter the default setting 255.255.255.0.
- Default Gateway: For example, enter the default setting 192.168.1.1.
- Primary/Secondary DNS: Enter the DNS that are provided by your ISP.
PPPoE: Select this option when you use a direct connection via the ADSL modem. You should have a PPPoE account from your Internet service provider. Enter the user name and password in the following boxes. Please note that once the camera get an IP address from the ISP as starting up, it automatically sends a notification email to you. Therefore, when you select PPPoE as your connecting type, you have to set up the email configuration in next step.
IP Setting
DHCP
Static IP
IP 192 . 168 . 1 . 240
Subnet Mask 255 . 255 . 255 . 0
Default Gateway 192 . 168 . 1 . 1
Primary DNS 192 . 168 . 1 . 1
Secondary DNS
PPPoE
User Name
Password
< Prev
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

Step 9 If you would like to set up email alerts that you can receive in the future, enter your email information here. You can get this information from your internet service provider. You can also set this up at a later time. Click **Next**.

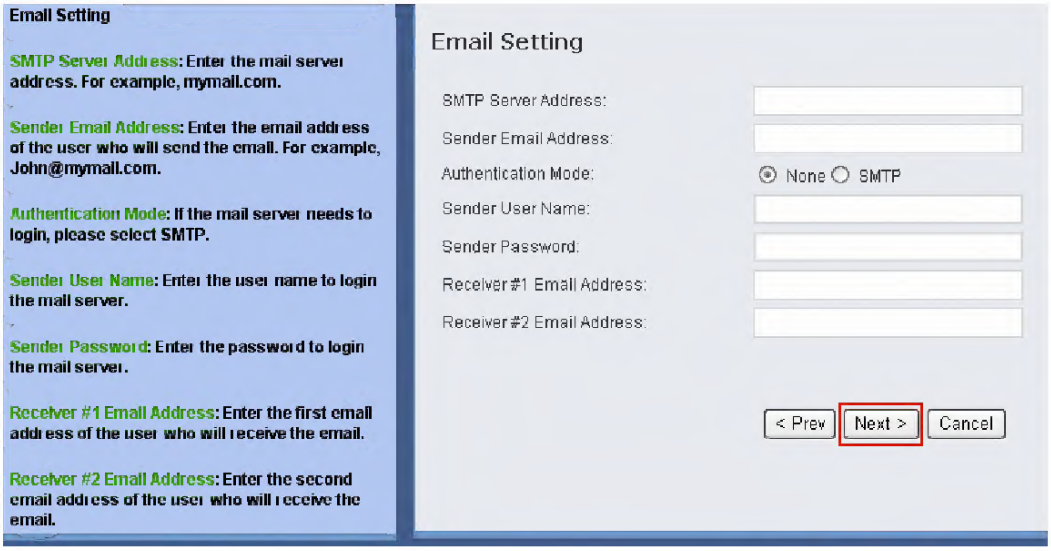
Email Setting
SMTP Server Address: Enter the mail server address. For example, mymail.com.
Sender Email Address: Enter the email address of the user who will send the email. For example, John@mymail.com.
Authentication Mode: If the mail server needs to login, please select SMTP.
Sender User Name: Enter the user name to login the mail server.
Sender Password: Enter the password to login the mail server.
Receiver #1 Email Address: Enter the first email address of the user who will receive the email.
Receiver #2 Email Address: Enter the second email address of the user who will receive the email.
Email Setting
SMTP Server Address:
Sender Email Address:
Authentication Mode:
None
SMTP
Sender User Name:
Sender Password:
Receiver #1 Email Address:
Receiver #2 Email Address:
< Prev
Next >
Cancel

Step 10 Confirm your settings at the last window. If everything is correct, click **Apply** and the configuration is completed.

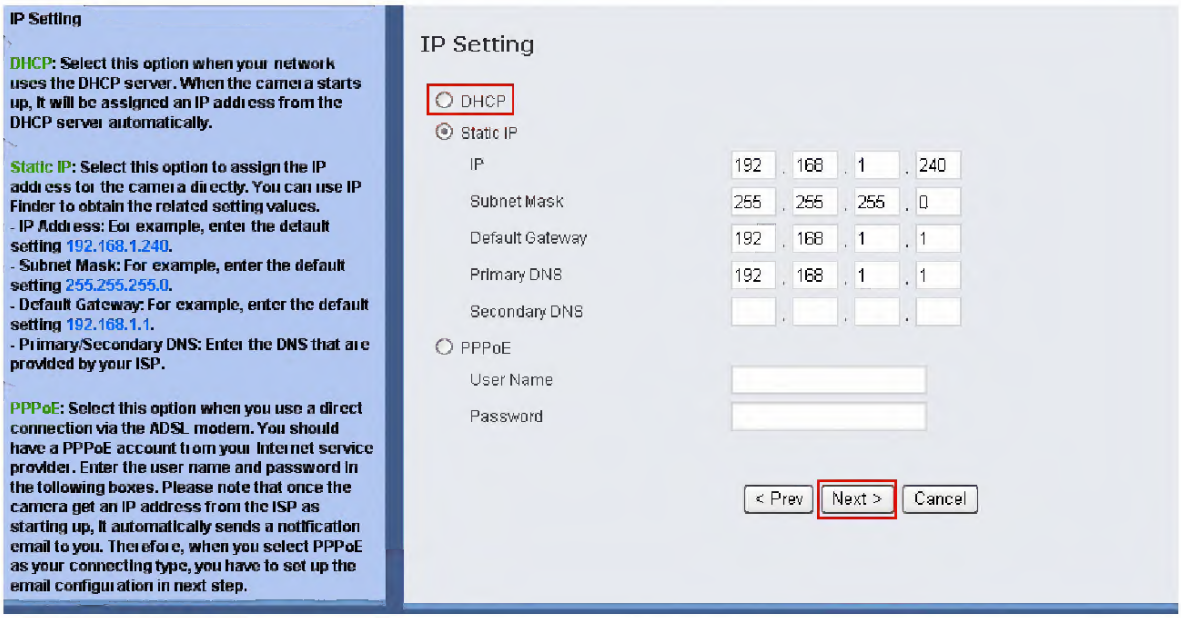
IP Setting
DHCP: Select this option when your network uses the DHCP server. When the camera starts up, it will be assigned an IP address from the DHCP server automatically.
Static IP: Select this option to assign the IP address for the camera directly. You can use IP Finder to obtain the related setting values.
- IP Address: For example, enter the default setting 192.168.1.240.
- Subnet Mask: For example, enter the default setting 255.255.255.0.
- Default Gateway: For example, enter the default setting 192.168.1.1.
- Primary/Secondary DNS: Enter the DNS that are provided by your ISP.
PPPoE: Select this option when you use a direct connection via the ADSL modem. You should have a PPPoE account from your Internet service provider. Enter the user name and password in the following boxes. Please note that once the camera get an IP address from the ISP as starting up, it automatically sends a notification email to you. Therefore, when you select PPPoE as your connecting type, you have to set up the email configuration in next step.
IP Setting
DHCP
Static IP
IP
192 . 168 . 1 . 240
Subnet Mask
255 . 255 . 255 . 0
Default Gateway
192 . 168 . 1 . 1
Primary DNS
192 . 168 . 1 . 1
Secondary DNS
PPPoE
User Name
Password
< Prev
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

Section 4

Viewing Images

Method 1 --- Access from "Web Browser"

Step 1 If you know the IP address of your network camera, you may open the Web Browser on your computer.

Step 2 Type the IP address of your camera (the default IP is 192.168.1.240) in the Address bar, and then press [Enter].

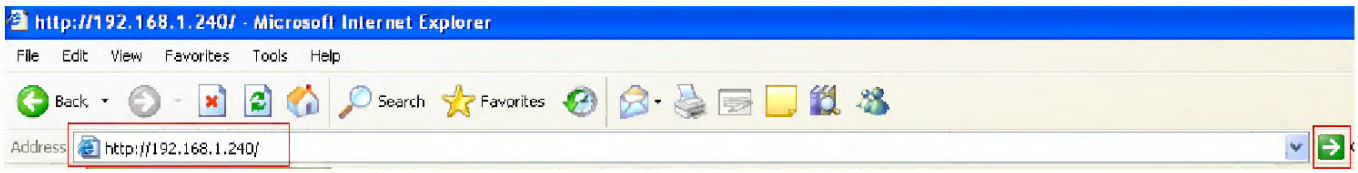

Step 3 Enter "**admin**" for both the **User name** and **Password**, and click **OK**.

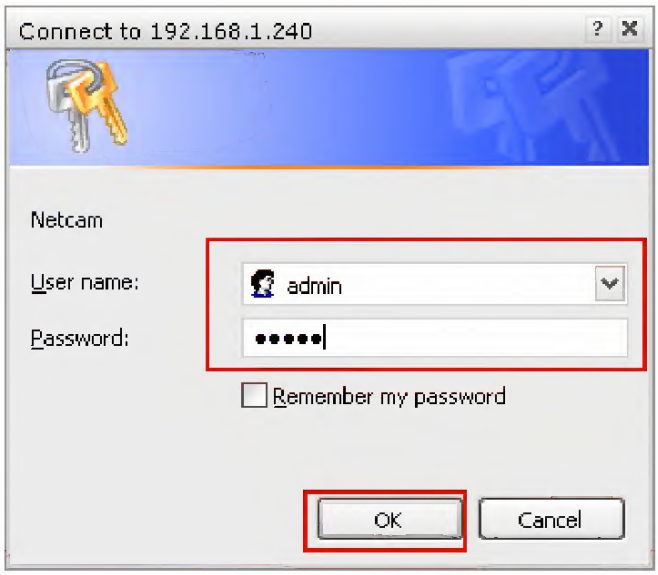

Downloaded from www.Manualslib.com manuals search engine

Step 4 If it is the first time for your computer to access the Web based viewing page, you may be prompted to install the software of ActiveX Control. Click on the bar on top of the screen and click on **Install ActiveX Control**.

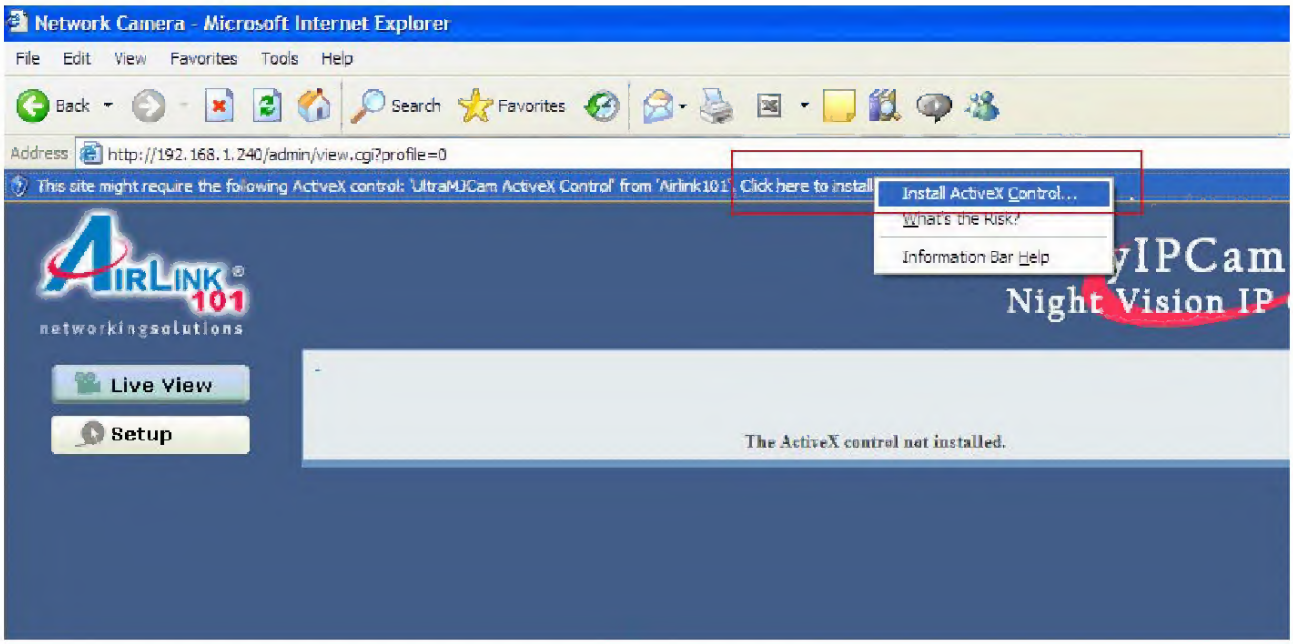
Network Camera - Microsoft Internet Explorer
File Edit View Favorites Tools Help
Back Search Favorites
Address http://192.168.1.240/admin/view.cgi?profile=0
This site might require the following ActiveX control: 'UltraMJCam ActiveX Control' from 'Airlink101'. Click here to install...
Install ActiveX Control...
What's the Risk?
Information Bar Help
IPCam
Night Vision IP
networkingsolutions
Live View
Setup
The ActiveX control not installed.

Step 5 Click on **Install**, and then you may be able to view images.

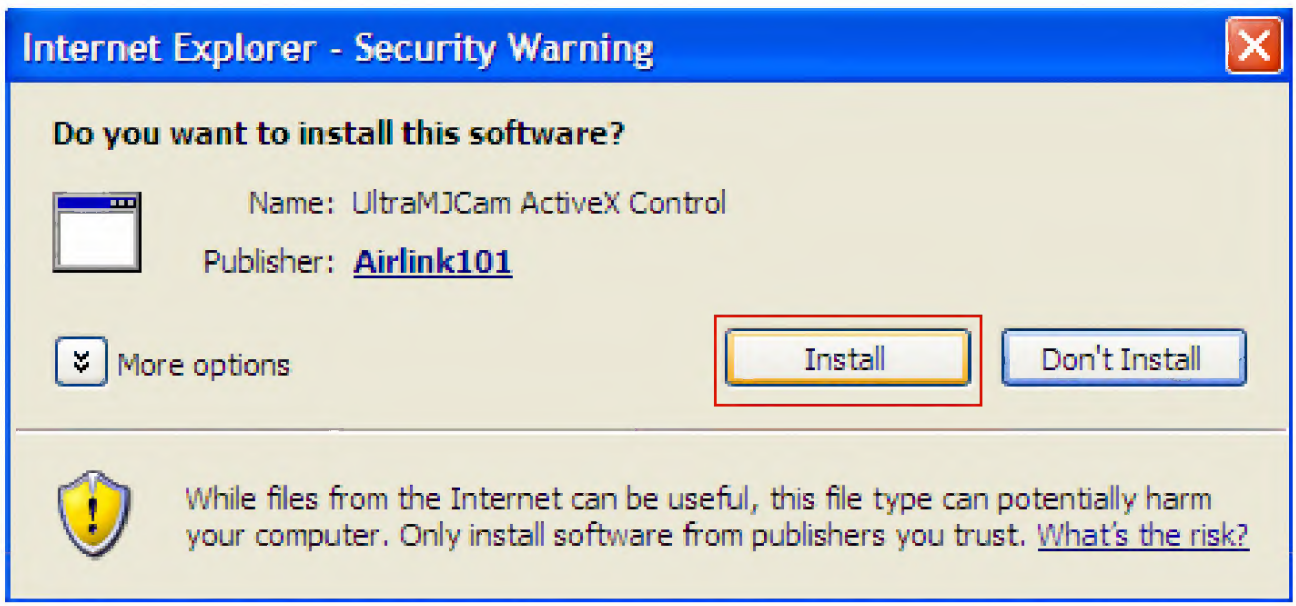
Internet Explorer - Security Warning
Do you want to install this software?
Name: UltraMJCam ActiveX Control
Publisher: Airlink101
More options
Install
Don't Install
While files from the Internet can be useful, this file type can potentially harm your computer. Only install software from publishers you trust. What's the risk?

Downloaded from www.Manualslib.com manuals search engine

Step 6 To get a clear view of images, you may simply rotate the camera's lens clockwise or counter-clockwise to adjust the focus.

Downloaded from www.Manualslib.com manuals search engine

Method 2 --- Access from "SkyIPCam Utility"

Step 1 Go to **Start > (All) Programs > AirLink101 > AirLink101 SkyIPCam Utiliy**, and open the Airlink101 SkyIPCam Utility.

Step 2 Select your camera from the list and click **Link**

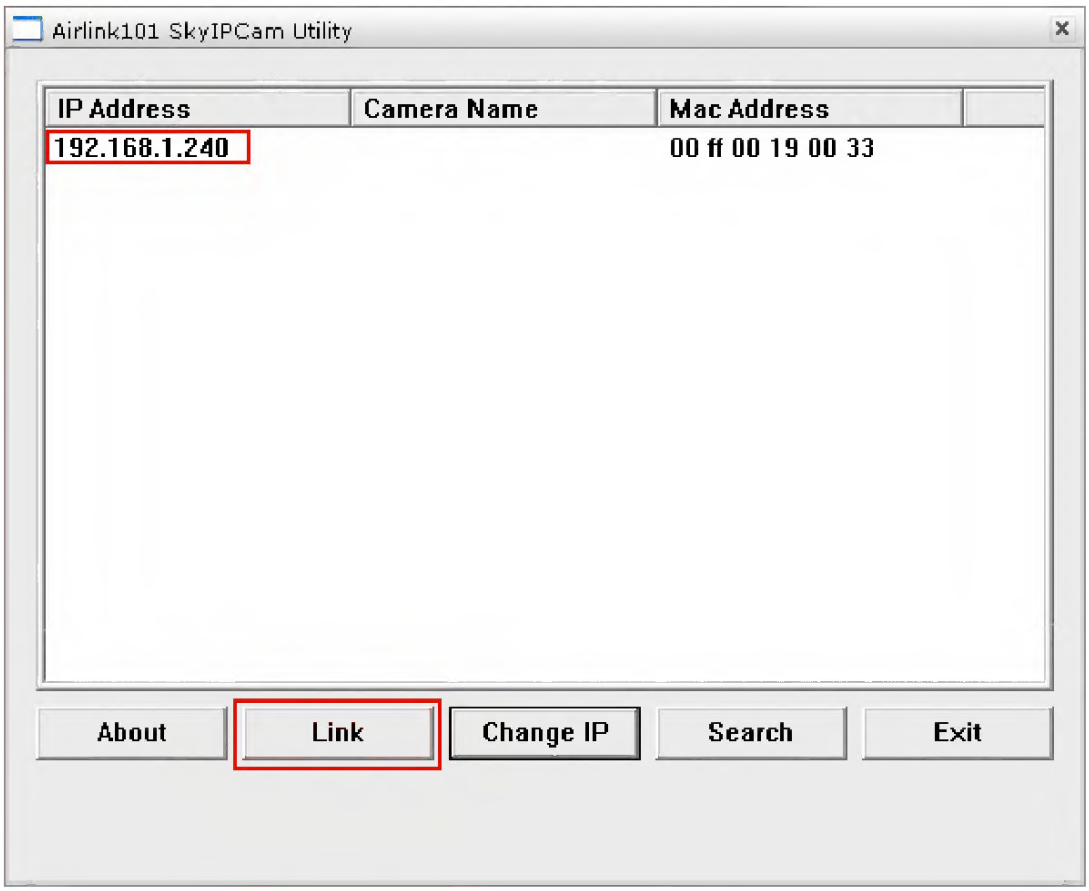

Step 3 Follow Step 3 to Step 6 mentioned in Method 1.

Downloaded from www.Manualslib.com manuals search engine

Section 5

Technical Support

E-mail: support@airlink101.com

Toll Free: 1-888-746-3238

Website: www.airlink101.com

*Actual data throughput will vary. Network conditions and environmental factors lower actual data throughput rate. Specifications are subject to change without notice. All products and trademarks are the property of their respective owners. Copyright ©2008 AirLink101®

Downloaded from www.Manualslib.com manuals search engine